
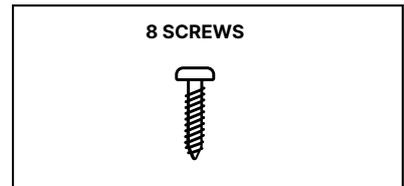
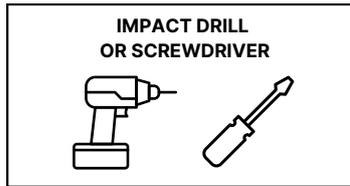


**INSTRUCTIONS:**


- A heavy-duty commercial grade adhesive is recommended for commercial use. For optimal bonding, allow 24 hours to achieve a strong bond, with further strengthening over 2-3 days. Complete curing takes 7 days, especially with thicker applications, less porous surfaces, or in colder conditions. It's recommended to keep the tables upside down for the entire time recommended by the manufacturer.
- If assembled incorrectly or not according to the assembly instructions, the product warranty will be voided.

**TOOLS REQUIRED (NOT INCLUDED):**

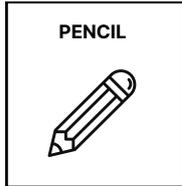

RECOMMENDED FOR COMMERCIAL USE


**WARNING:**



When using an impact drill ensure it is set to a low power setting.


**ASSEMBLY INSTRUCTIONS:**

**STEP 1**

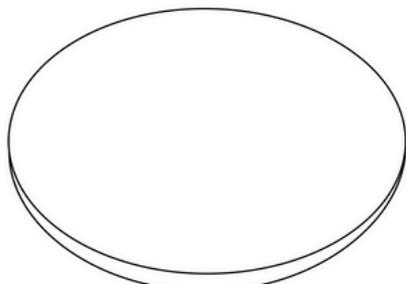


Place the table presentation-side down on a clean surface.

**STEP 2**

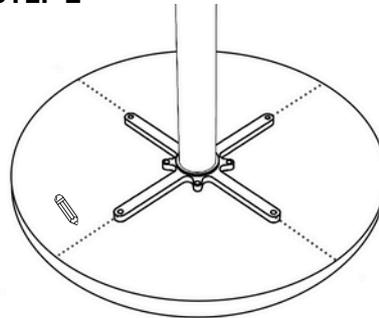

Measure and centre the assembled table base, marking the placement points with a pencil.


**STEP 3**

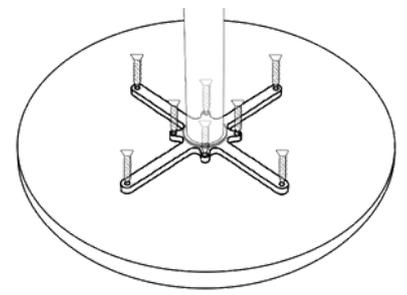

Secure your screws at the marked positions, use the low power setting when operating any power tool.


**FOR COMMERCIAL USE:**

**STEP 3**

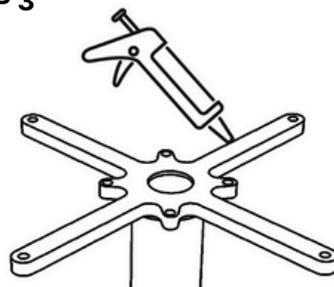

For commercial use, apply commercial adhesive to one surface only, preferably the top plate.

**STEP 4**

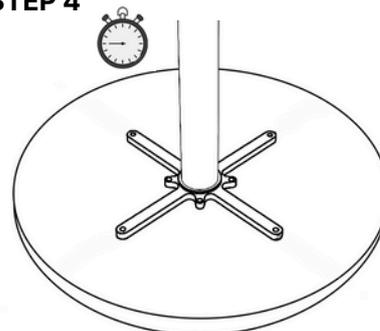

Follow the curing instructions provided by the adhesive manufacturer.