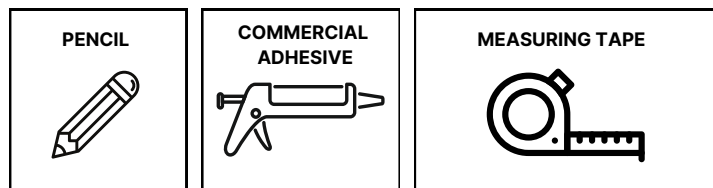
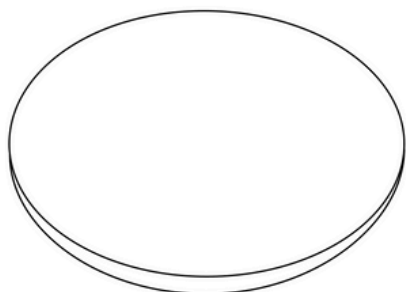


INSTRUCTIONS:

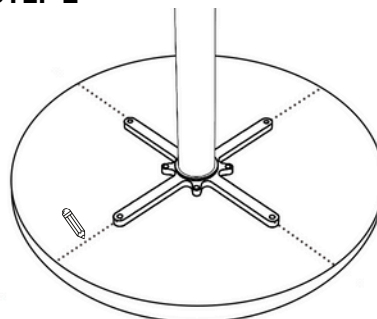
- A heavy-duty commercial grade adhesive is recommended for this application. For optimal bonding, allow 24 hours to achieve a strong bond, with further strengthening over 2-3 days. Complete curing takes 7 days, especially with thicker applications, less porous surfaces, or in colder conditions. It's recommended to keep the tables upside down for the entire time recommended by the manufacturer.
- If assembled incorrectly or not according to the assembly instructions, the product warranty will be voided.

TOOLS REQUIRED (NOT INCLUDED):**WARNING:**

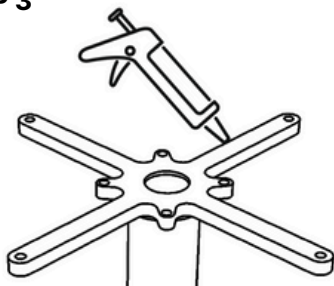
Once cured, commercial adhesive forms a permanent bond. Table tops attached using this method cannot be removed.

ASSEMBLY INSTRUCTIONS:**STEP 1**

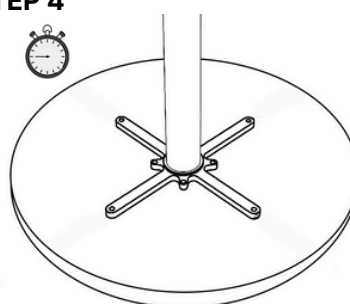
Place the table top presentation-side down on a protective surface to avoid scratching.

STEP 2

Position the assembled table base on top, ensure it is centred, and mark its position. Then, remove the table base.

STEP 3

Apply the adhesive along each arm of the spider, ensuring it is applied to one surface only, preferably to the top plate.

STEP 4

Once the base is positioned, leave it in place following the adhesive instructions, and allow it to fully cure before use.