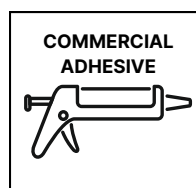
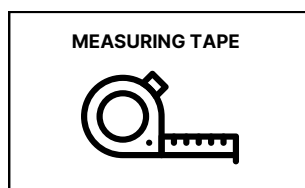
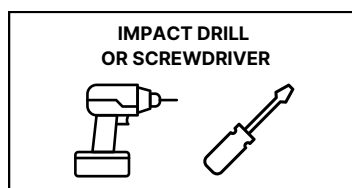
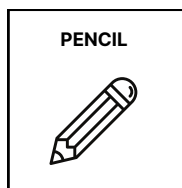



**INSTRUCTIONS:**


- A heavy-duty commercial grade adhesive is recommended for commercial use. For optimal bonding, allow 24 hours to achieve a strong bond, with further strengthening over 2-3 days. Complete curing takes 7 days, especially with thicker applications, less porous surfaces, or in colder conditions. It's recommended to keep the tables upside down for the entire time recommended by the manufacturer.
- If assembled incorrectly or not according to the assembly instructions, the product warranty will be voided.

**TOOLS REQUIRED (NOT INCLUDED):**


RECOMMENDED FOR  
COMMERCIAL USE

**WARNING:**


When using an impact drill ensure it is set to a low power setting.

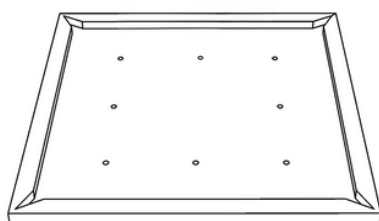**ASSEMBLY INSTRUCTIONS:****STEP 1**


Place the table presentation-side down on a clean surface.

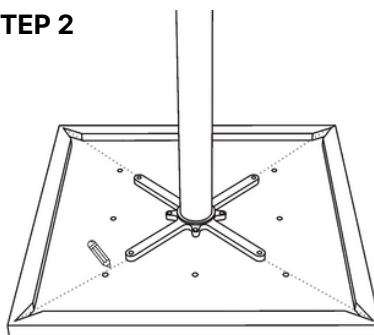**STEP 2**


Measure and centre the assembled table base, marking the placement points with a pencil.

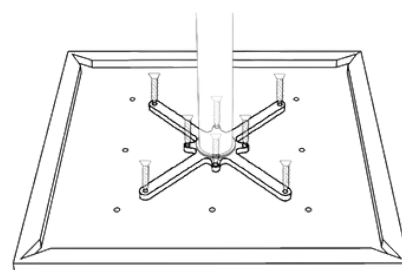**STEP 3**

Secure your screws at the marked positions, use the low power setting when operating any power tool.

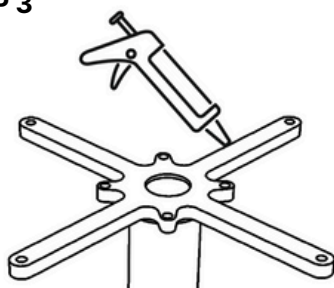**FOR COMMERCIAL USE:****STEP 3**

For commercial use, apply commercial adhesive to one surface only, preferably the top plate.

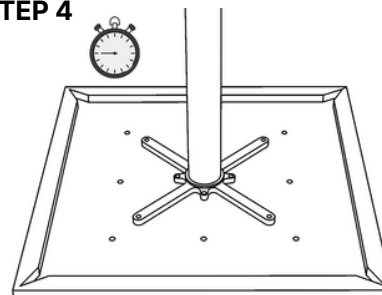**STEP 4**

Follow the curing instructions provided by the adhesive manufacturer.