


Assembly Instructions


MODEL NO: D-HP2D

APEX
COMMERCIAL FURNITURE

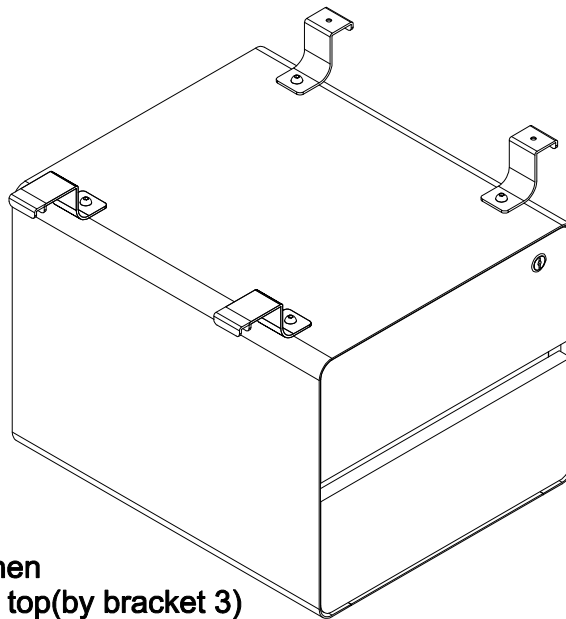


Bolt Screw	8×16	
		4
		4PCS
Wood Screw	5×20	
		5
		2PCS
Allen Wrench	M5	
		6
		1PCS


STEP1

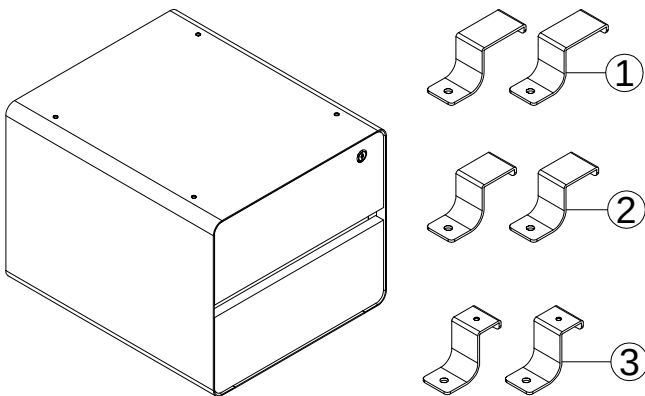

STEP2

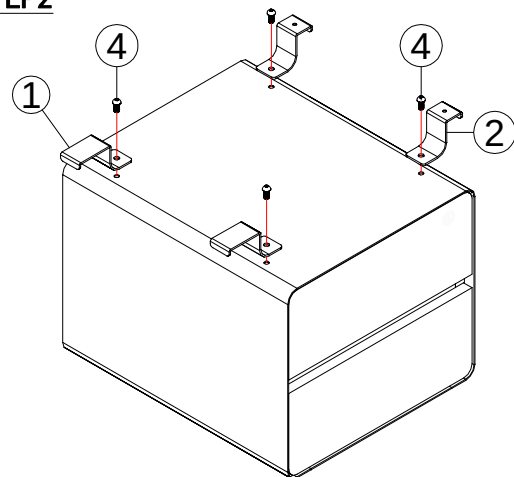


STEP3

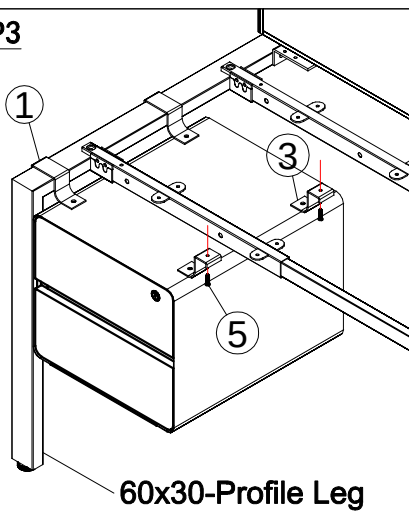


60x30-Profile Leg

STEP4

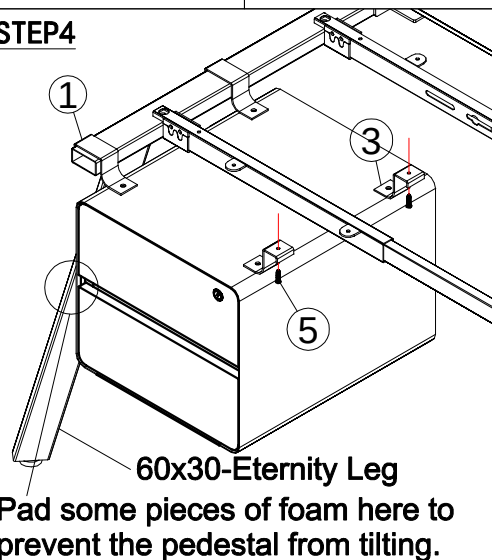

STEP5

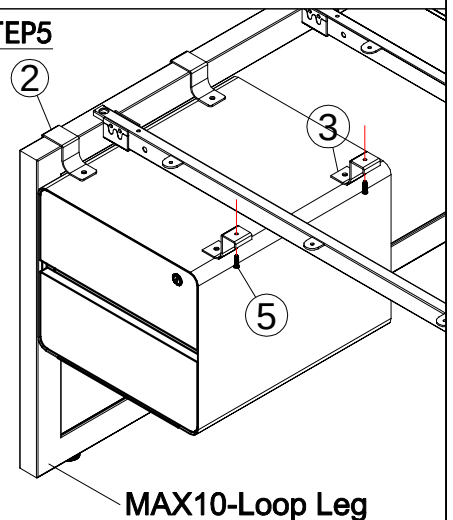

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
 - Check to be sure that you have all parts and hardware.
 - Remove all wrapping materials, including staples & packing straps before you start to assemble.
 - Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

