

## ASSEMBLY INSTRUCTIONS:

Product Code : SPC12 / SPC18 / CMZ1245 / CMZ1545 / CMZ1845

Product Name: Rapid Span Credenza

## TIME REQUIRED:

35 minutes

## TOOLS REQUIRED:

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler

\*Tools are not included.

## SKILL REQUIRED:

Easy  Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert.

For most products, two persons are recommended.

### NOTE

- As this is a commercial product, some intermediate skills may be required.
- No pre-drill holes or markings are provided on our table or desk tops.
- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact the Apex team. Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.
- Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
- Remove all wrapping materials, including staples and packing straps before you start to assemble
- Keep all hardware parts out of reach of children.

### CAUTION

- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

### WARNING











- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
- Failure to follow these warnings could result in serious injury.

# ASSEMBLY INSTRUCTIONS


## CMZ1845 & SPC18




pin 1 24PCS	6x35 2 24PCS	CAM 3 24PCS
Cam Cover 4 24PCS	Bolt M8x16 5 8PCS	Screw 6 4PCS
T-Handle 7 2PCS	Screw 8 4PCS	Screw 9 2PCS
CUSHION 10 6PCS	Screw 11 6PCS	Screw 12 2PCS
LOCK 13 1PCS	Screw 14 2PCS	

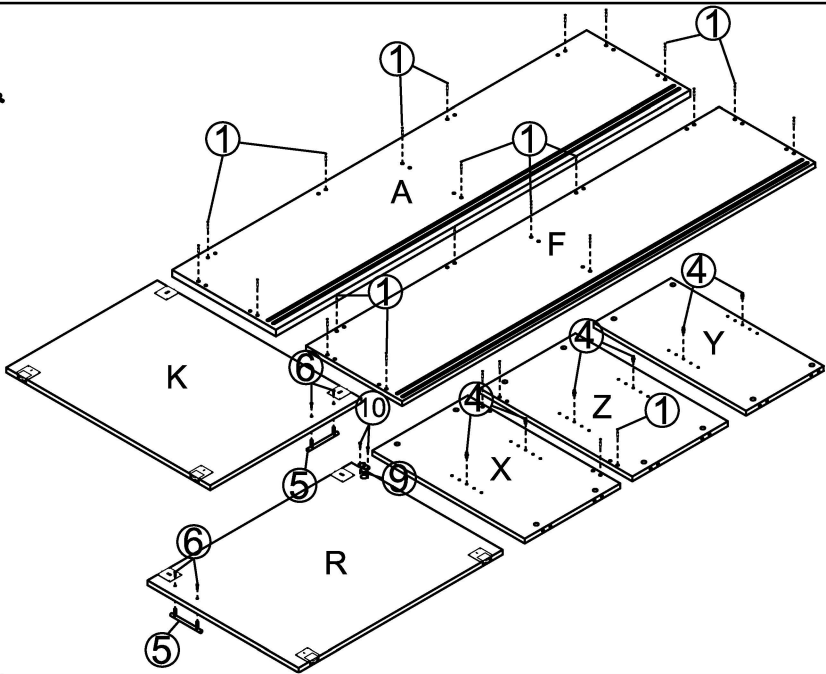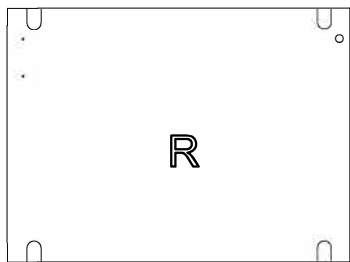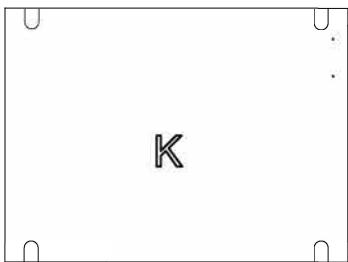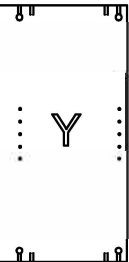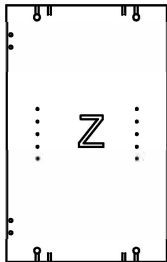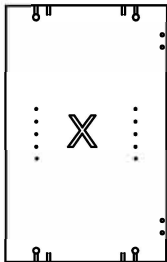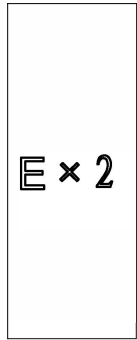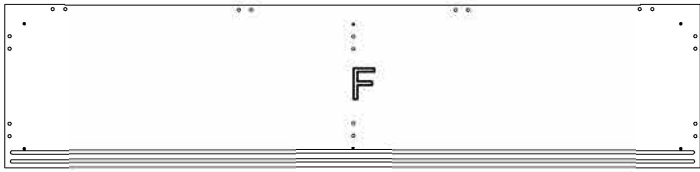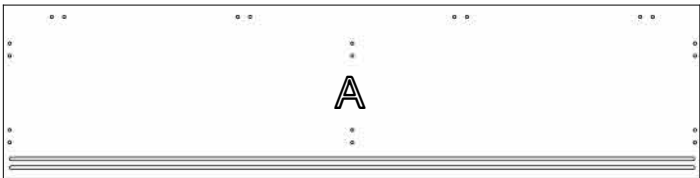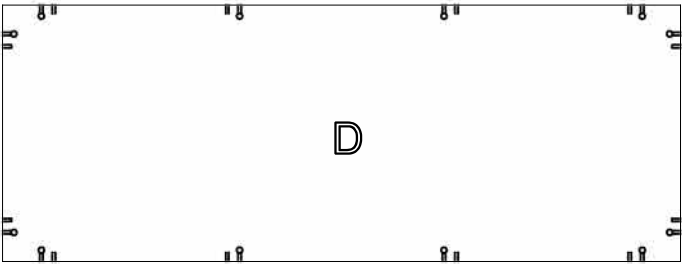


1

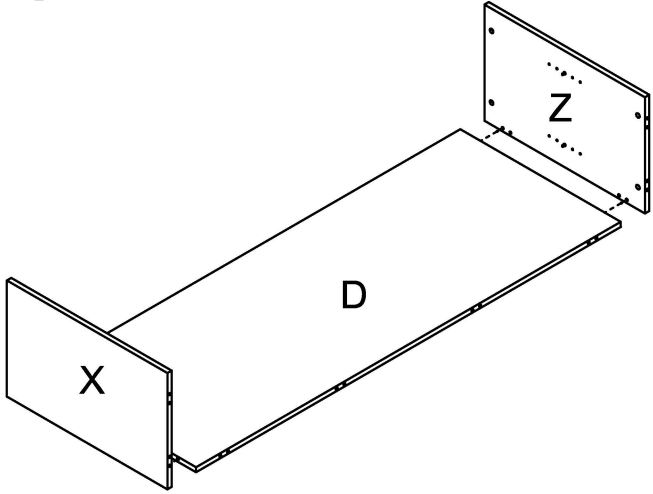


2

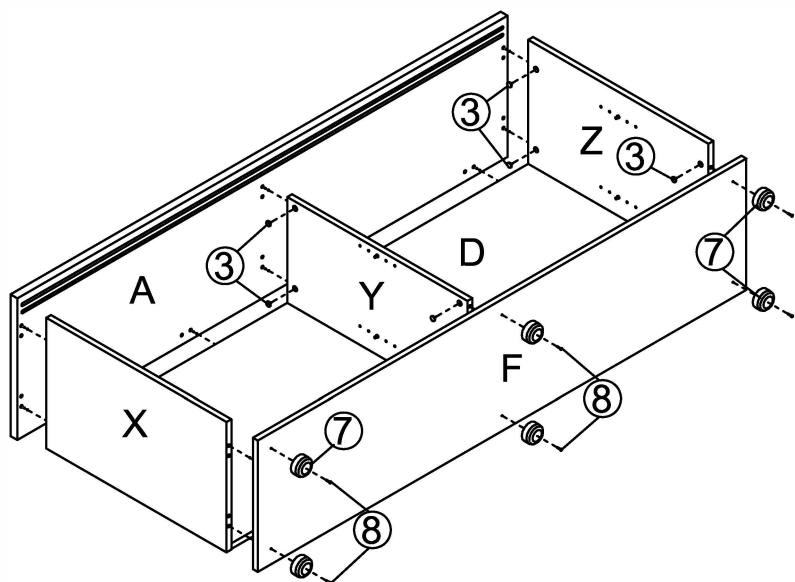


3

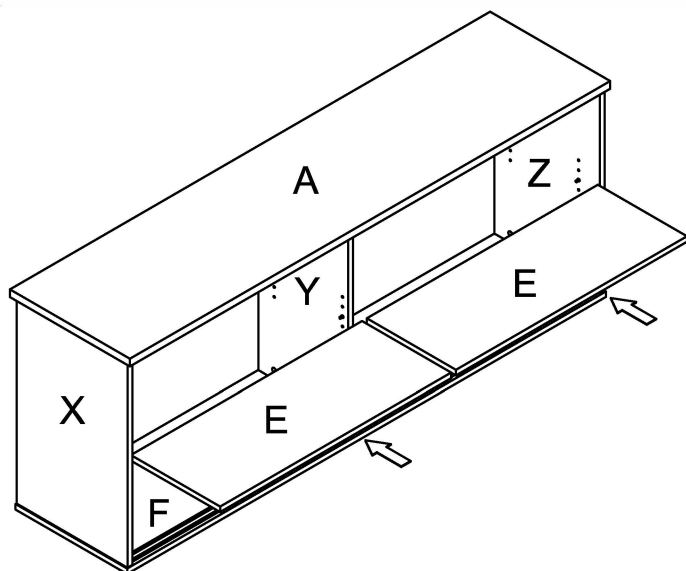



4

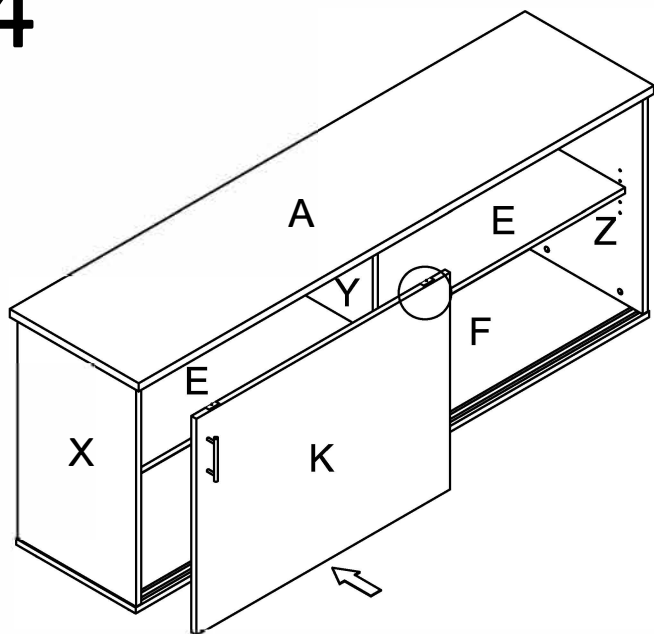

5

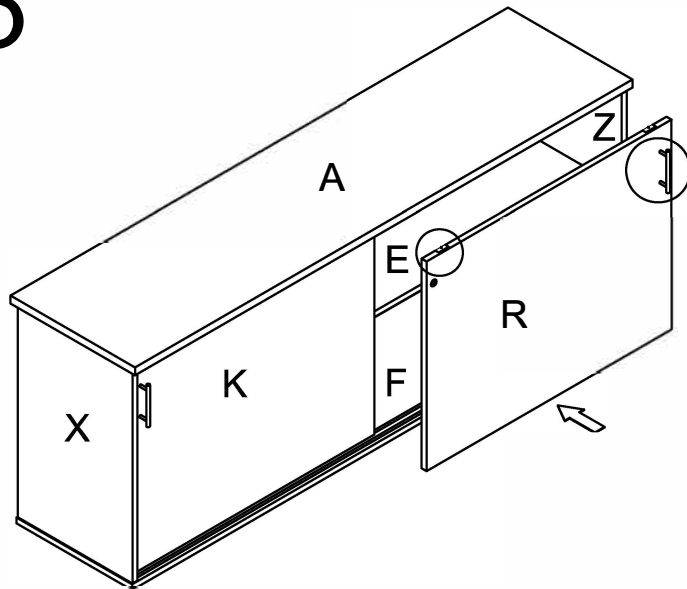




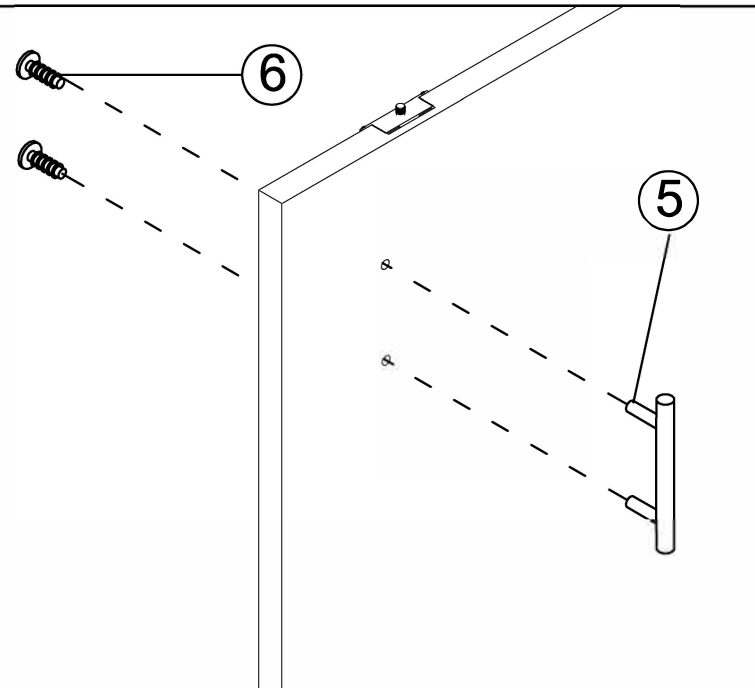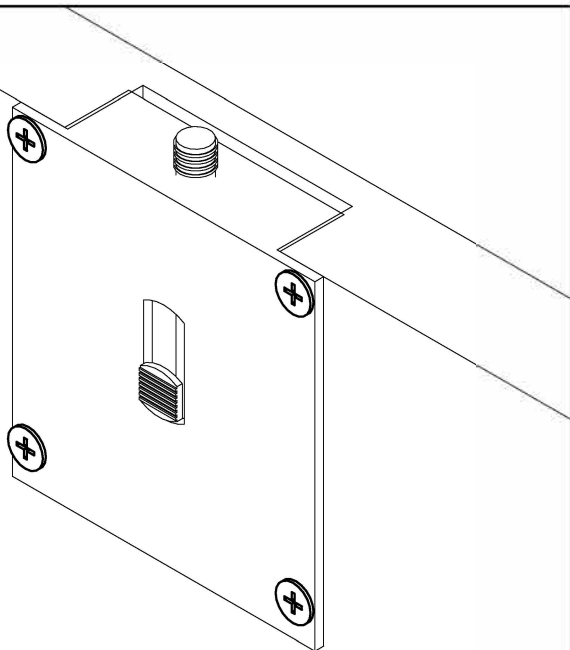





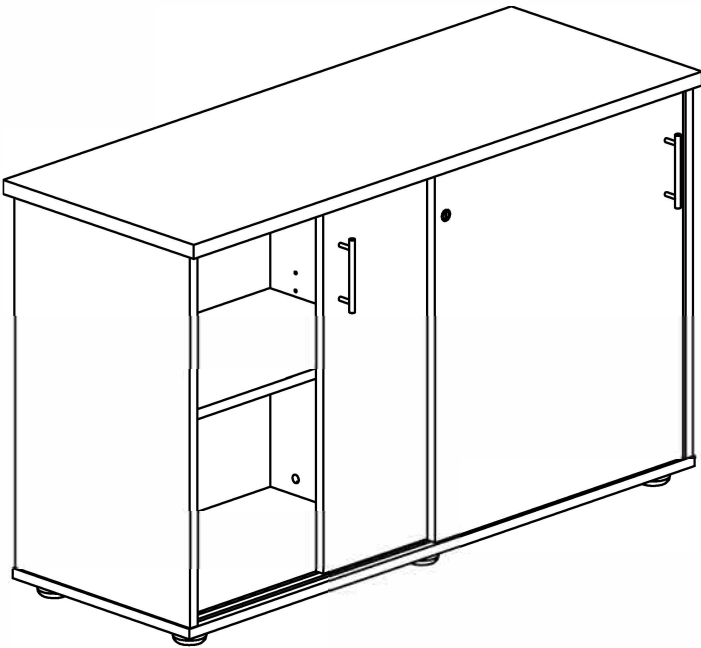


6






# ASSEMBLY INSTRUCTIONS


## CMZ1545




 pin 1 6×35 20PCS	 CAM 2 20PCS
 Cam Cover 3 20PCS	 Bolt M8x16 4 18H <sub>1</sub> A ±0.5 8PCS
 T-Handle 5 2PCS	 Screw 6 4×22 4PCS
 CUSHION 7 25H <sub>1</sub> A ±0.5 6PCS	 Screw 8 4×30 6PCS
 LOCK 9 1PCS	 Screw 10 3.5×13 2PCS
	

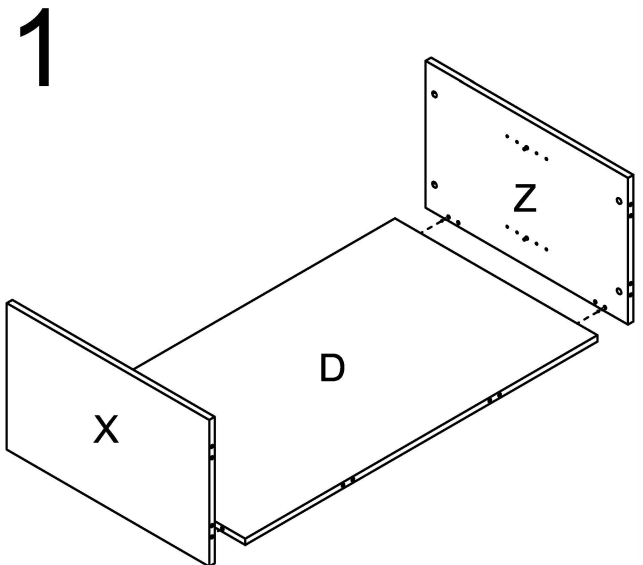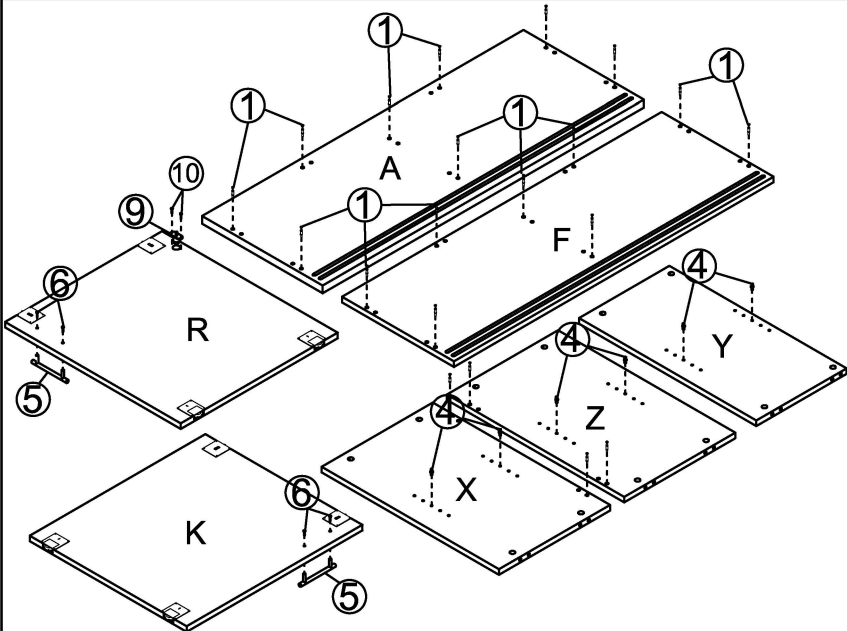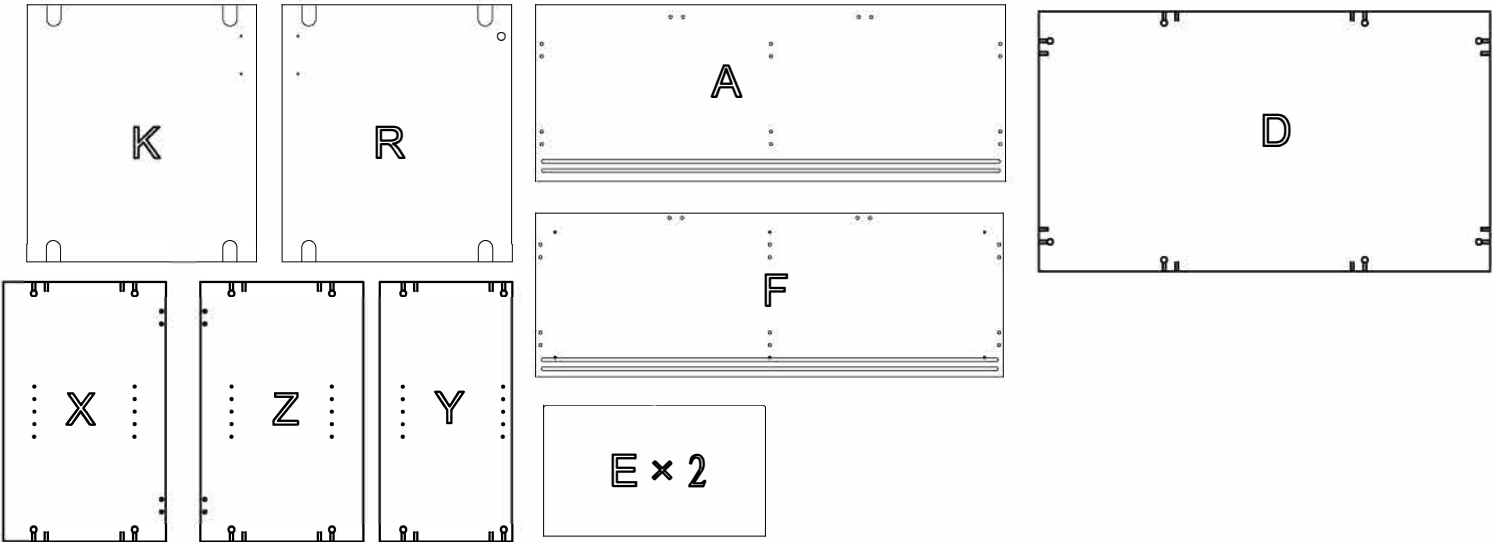


2

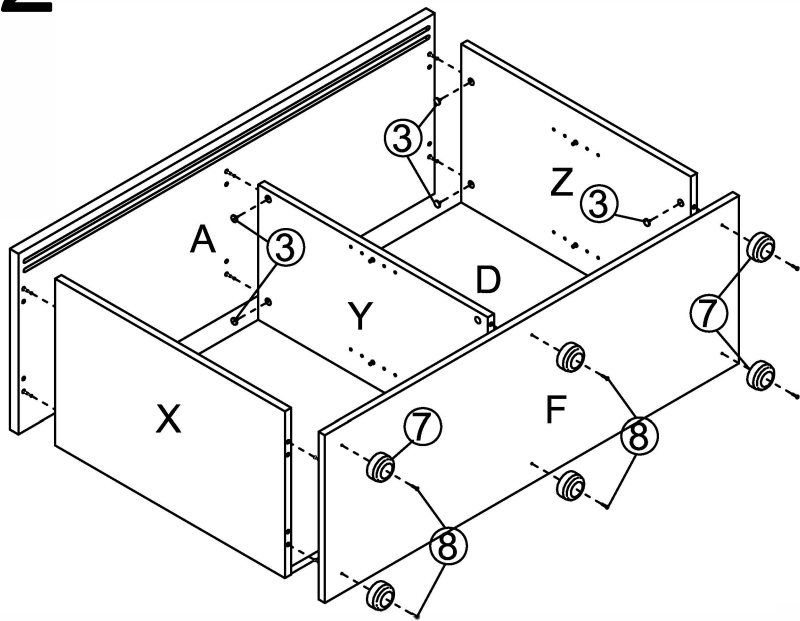


3

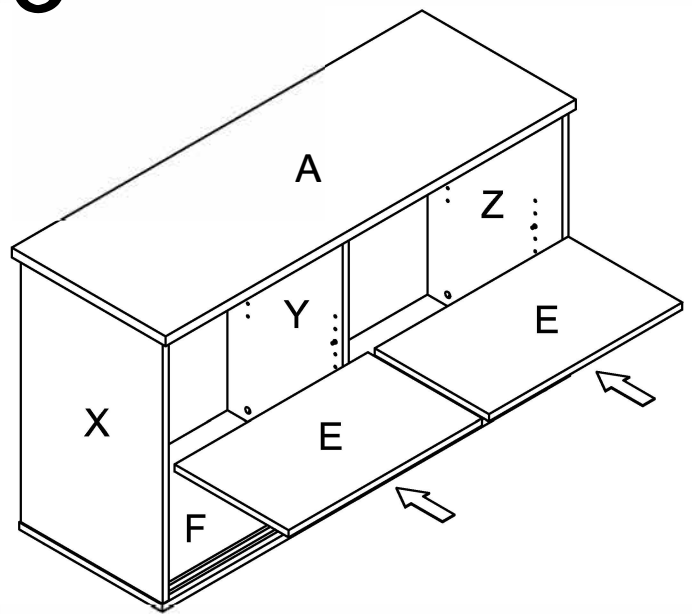



4

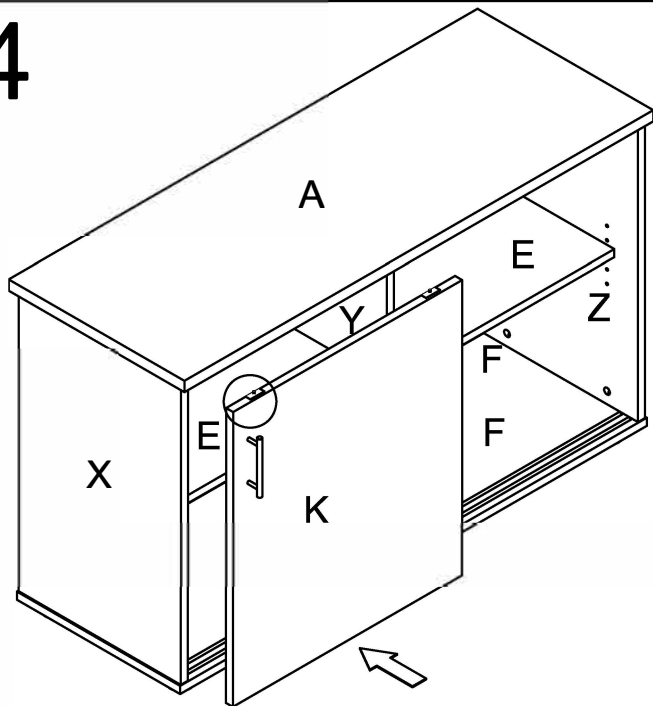

5

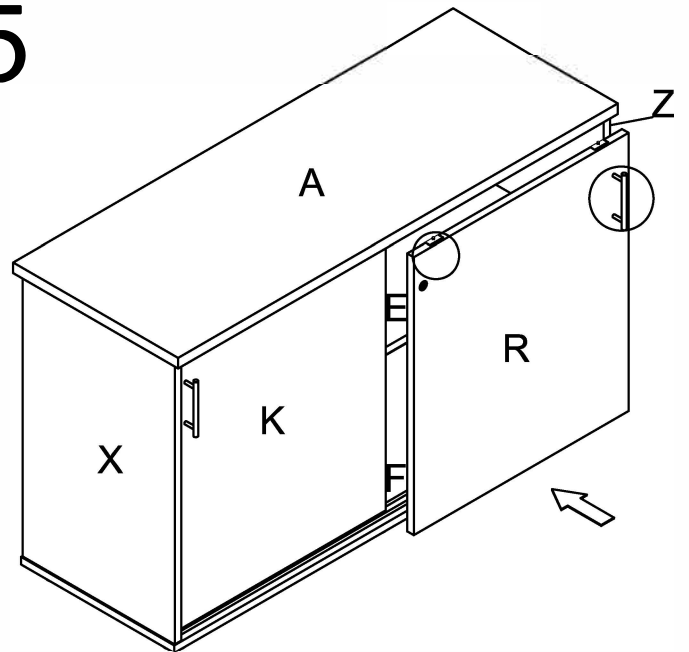


6


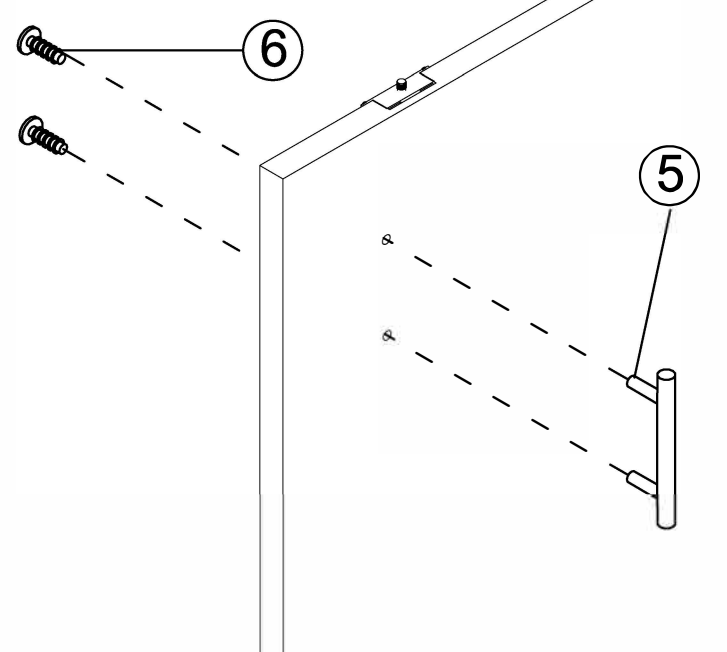
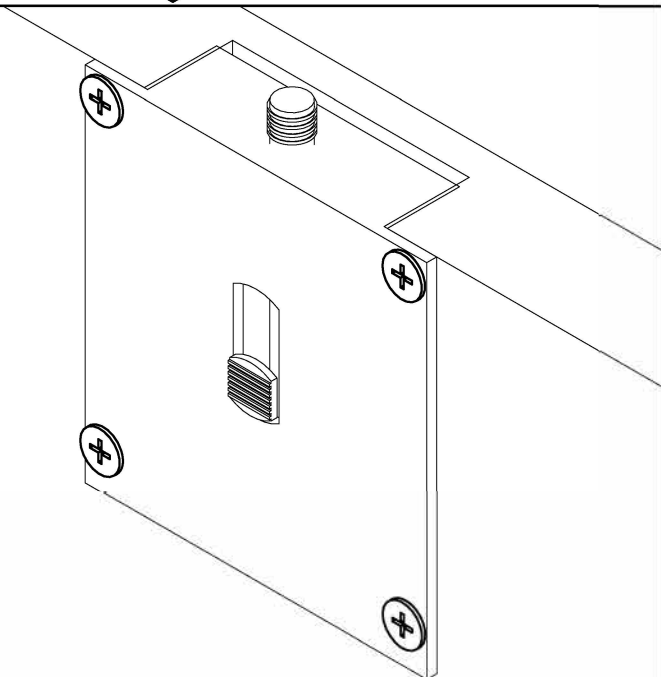


# ASSEMBLY INSTRUCTIONS


## CMZ1245 & SPC12

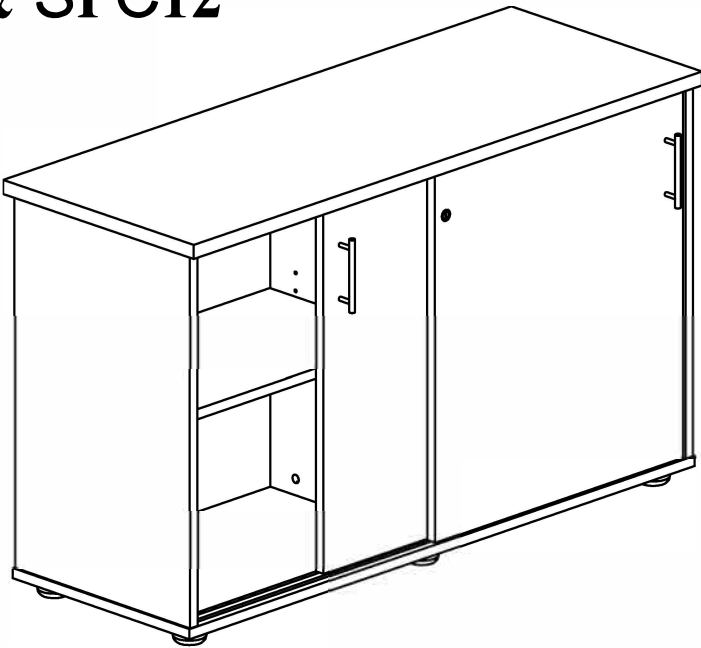


<b>pin</b> 1 20PCS	<b>6x35</b> CAM 2 20PCS
<b>Cam Cover</b> 3 20PCS	<b>Bolt M8x16</b> 4 8PCS
<b>T-Handle</b> 5 2PCS	<b>Screw</b> 6 4PCS
<b>CUSHION</b> 7 6PCS	<b>Screw</b> 8 6PCS
<b>LOCK</b> 9 1PCS	<b>Screw</b> 10 2PCS

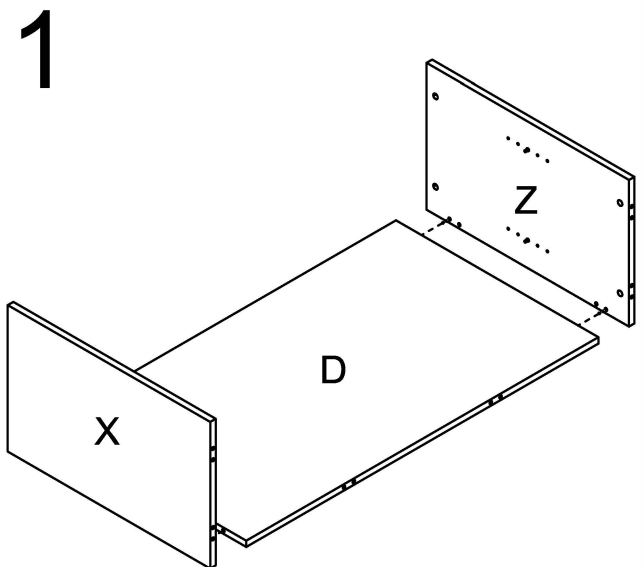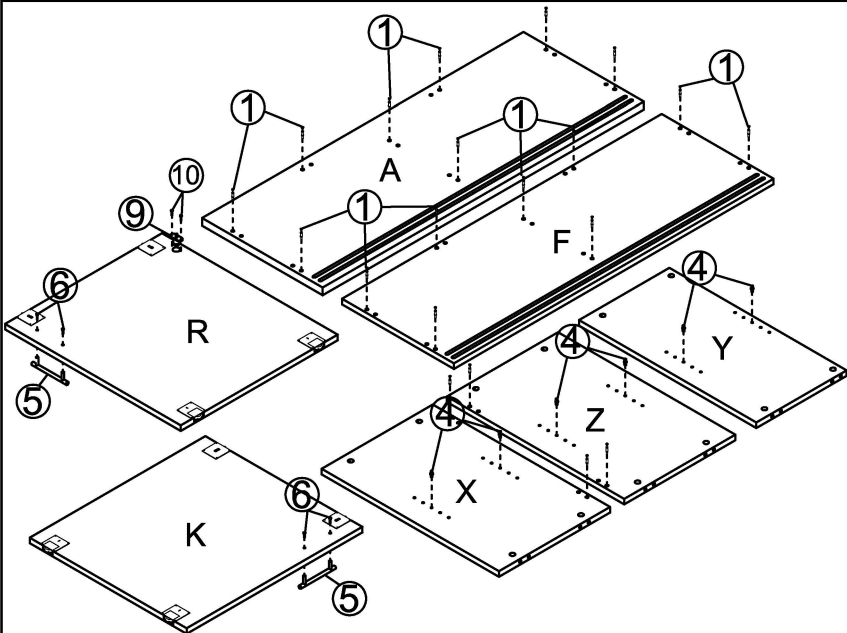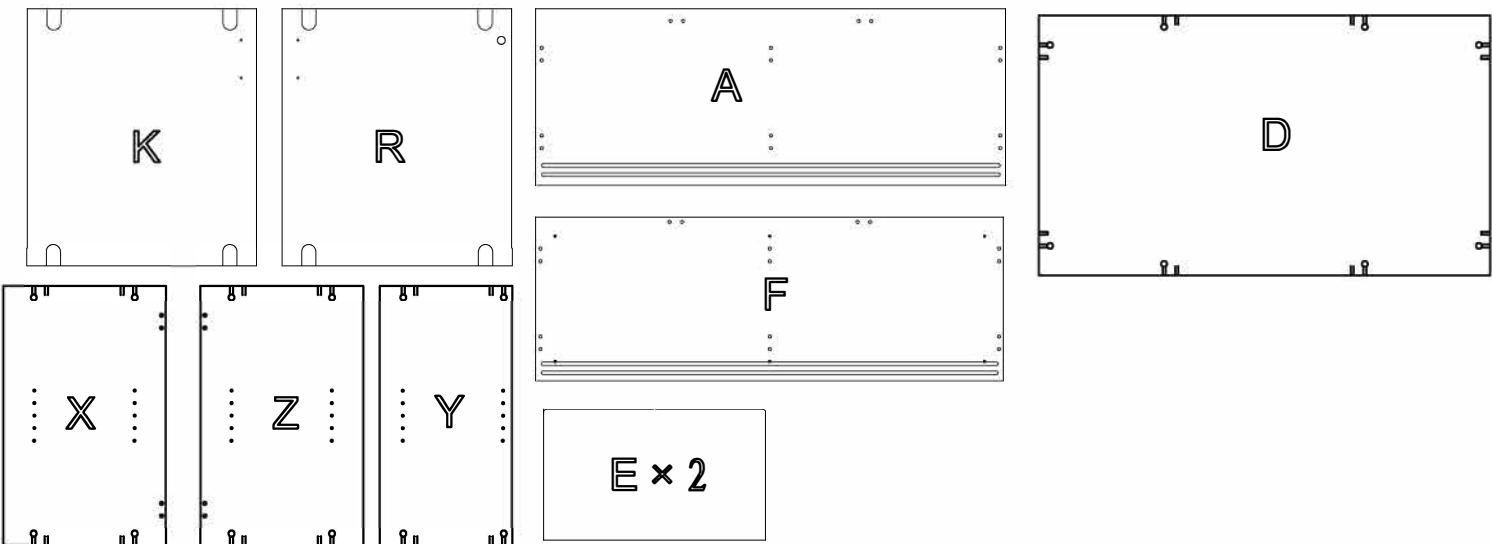


2

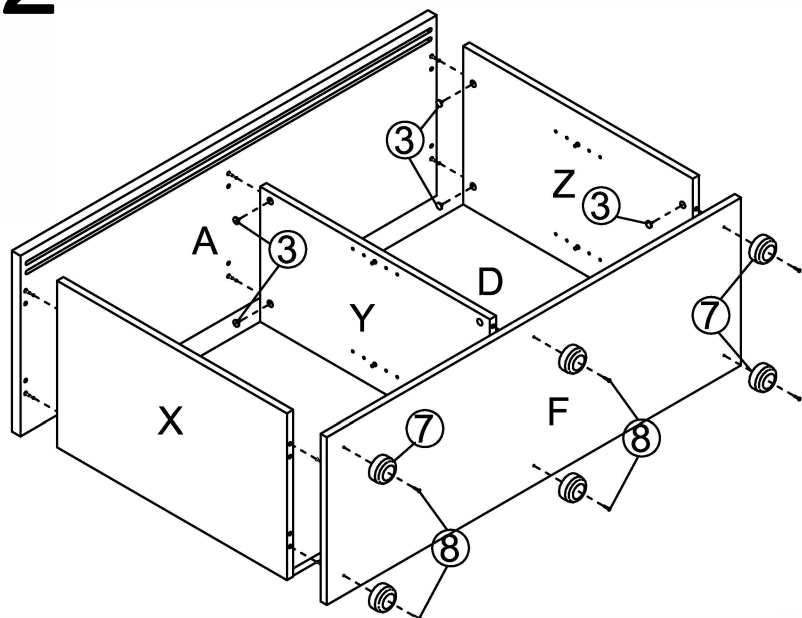


3

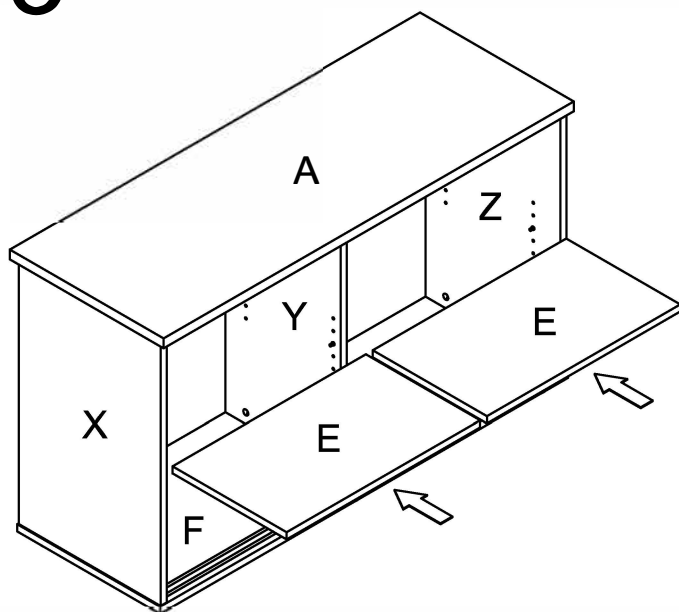

4

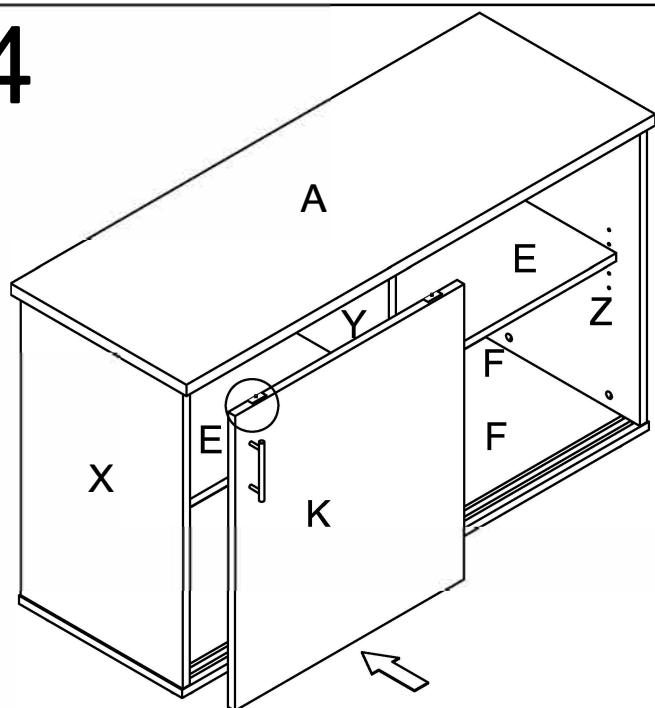

5

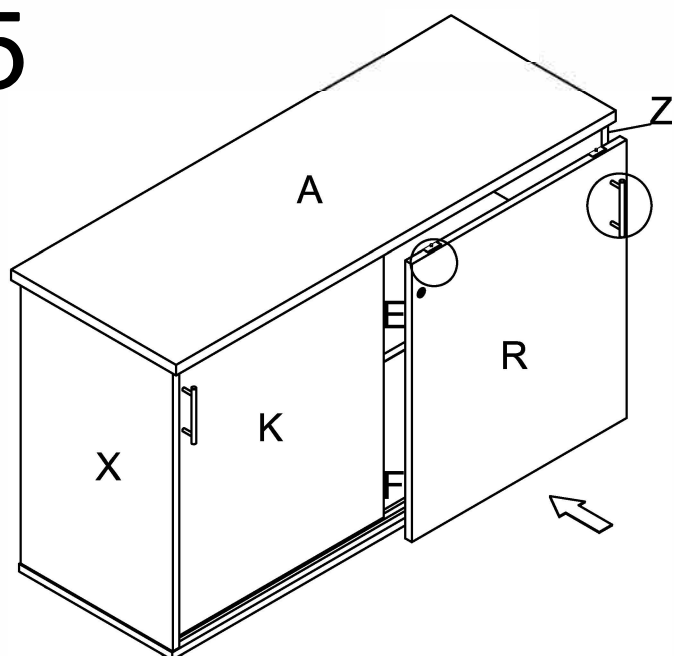

6

