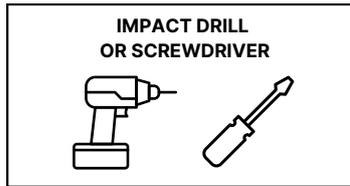
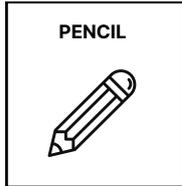

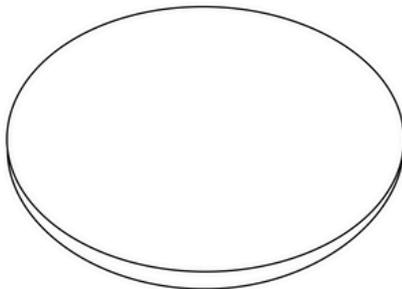


INSTRUCTIONS:


- A heavy-duty commercial grade adhesive is essential for commercial use. For optimal bonding, allow 24 hours to achieve a strong bond, with further strengthening over 2-3 days. Complete curing takes 7 days, especially with thicker applications, less porous surfaces, or in colder conditions. It's recommended to keep the tables upside down for the entire time recommended by the manufacturer.
- If assembled incorrectly or not according to the assembly instructions, the product warranty will be voided.

TOOLS REQUIRED (NOT INCLUDED):**TOOLS REQUIRED (INCLUDED):****WARNING:**


When using an impact drill ensure it is set to a low power setting.

ASSEMBLY INSTRUCTIONS:**STEP 1**


Place the table presentation-side down on a clean surface.

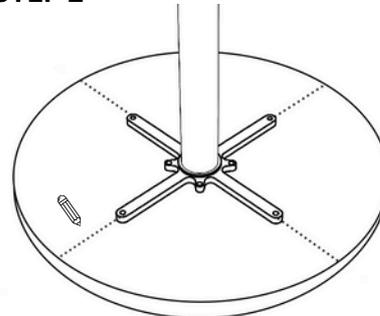STEP 2

Measure and centre the assembled table base, marking the placement points with a pencil.

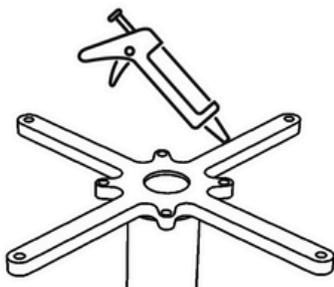STEP 3

Apply commercial adhesive to one surface, preferably the top plate.
Align the table base with the marked position.

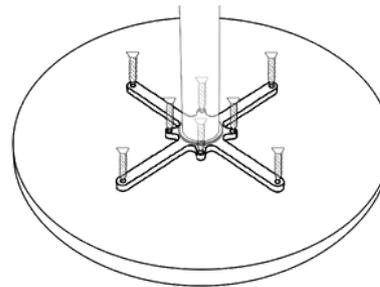STEP 4

Fasten the screws at the marked positions, ensuring a secure fit. When using a power tool, set it to a low power setting for optimal control.